H-2000 User Manual


Hydrogen Inhalation Device

- a Before setting up your device, please carefully read all the safety precautions and instructions.
- ^a Failure to comply with all the precautions may result in the loss of warranty coverage. Service fees may apply for any A/S services.

Polymer electrolyte device that generates 99.97% pure hydrogen and oxygen gas (at least 2000 CC per min). For any questions about the device, any malfunctions, warranty concerns and/or the consumables, please contact your local distributor or Hue Light's customer service center at cs@huelight.kr.


Power: A/C 100-230V (0.9kVA) 50-60Hz

Warranty Notice: Your Hue Light H-2000 warranty will not be valid for any malfunctions due to the following reasons: 1) disassembling the device without any authorization, 2) natural disasters, 3) not perperly following the instructions, and 4) user's carelessness.

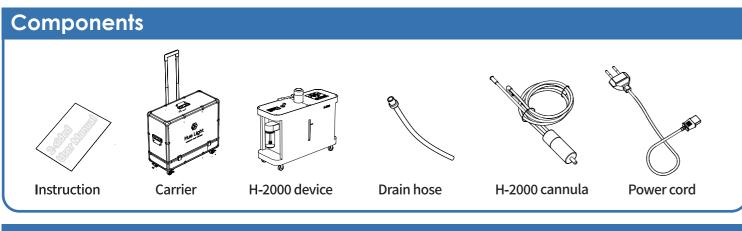

Precaution

This device does not store gas inside the device when the gas (H_2/O_2) are generated. However, spark may occur due to the reasons below, please use with caution.

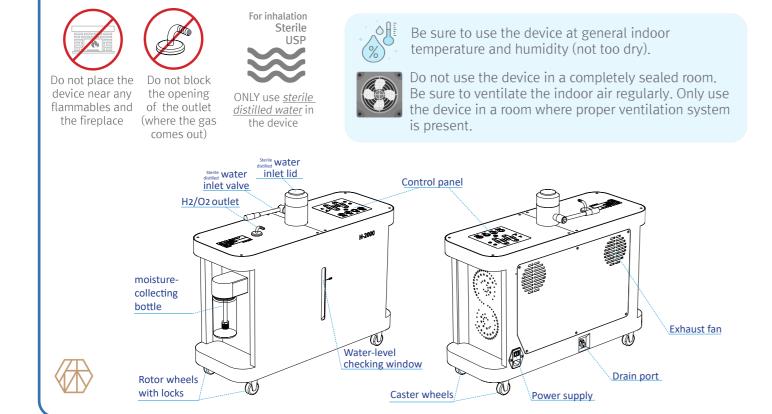

Precaution : Parts

1. H_{a}/O_{a} outlet

- The outlet is stainless steel, so if any metal substance get in close contact with the outlet during the operation may cause a spark.
- If the cannula is not connected to the device, you would hear a beeping sound from the gas outlet port. As the gas is naturally released, please simply connect the cannula to the outlet port shown in the diagram.
- To test whether the device is properly generating the gas, try to insert the nasal prob to a small bucket of water. You should be able to see the bubbles forming, indicating that the gas is properly generated.

2. Sterile distilled water inlet valve

When filling the water tank with the sterile distilled water, open the inlet valve and carefully pour the sterile distilled water into the chamber. After filling the tank to 1L, close the valve by placing the lever back to the horizontal position as shown in the diagram.

*Only pure sterile distilled water without any additives should be used.

3. Sterile distilled water inlet lid

After filling the water, please close the lid to prevent any object/substance to enter into the water tank. There's a netted protecting filter inside the inlet to prevent any large objects to enter into the water tank.

4. Control panel

The control panel touchscreen is very sensitive to touch. Therefore, please do not try to control it with a glove on and/or a wet finger. Never place any objects and/or press pressure down on the control panel. This can cause device malfunction.

5. Moisture-collecting water bottle

You should always fill the sterile distilled water to the minimum level to maintain its stability of the device. The water would gradually increase as you operate the device. If the water reaches up to the maximum level, please empty the bottle and fill it up with a sterile distilled water to the minimum level to restart the device. Normal occurence: The water in the cooling water bottle may gradually return back to the water tank inside the device when the device is not operated for a long time.

6. Rotor wheels with locks

There are two rotor wheels at the bottom left side. After moving the device, lock the wheels in place to lock the device in place.

7. Caster wheels


There are two caster wheels at the other bottom side for easy movement. It moves at a fixed angle.

8. Water-level checking window

There's a display to monitor the water level in the tank. During the operation, you would see the bubbles forming.

9. Power supply

Fuses are there to protect the device and the user from the event of voltage imbalance, short circuit and electrical grounding issues. In some countries and/or facilities, if the electric quality is not stable and/or electrical grounding issues occur, the installed fuse would breakout and the device may not turn on. Please replace the fuse following the procedures below.



way in.

10. Drain port


When draining the water, follow the instructions indicated on the left side of the drain. Never drain during the operation. This may cause system malfunction. After draining the water, make sure to remove the drain hose to prevent water from draining when filling the tank with a new sterile distilled water.

11. Exhaust fan


During the operation, warm air may be emitted from the exhaust fan. Please place the device at least 10 cm away from the wall.

Spare fuse is stored inside the socket. After replacing the old fuse with the spare fuse, push the socket all the


Dispose the old fuse responsibly. Fuse specification: $\Phi 5 \times 20$ mm (about 0.79 in) 10A












[Valve opened]

User Guide

Connect the power


- (1) Connect the power cord to the device.
- (2) Connect the power cord to the outlet (Highly recommended: use a power surge protector)
- ③ Turn on the power switch

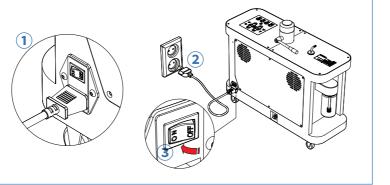


Fill up the water tank

- 1 Check the water level via the display window.
- (2) Remove the lid from the water inlet.
- (3) Turn the valve up to a verticle position to open the inlet opening.
- (4) Carefully add sterile distilled water into the tank up to 1 L. Watch the water level through the display window.
- (5) Turn the valve down to a horizontal position to close the inlet opening.
- 6 Close the lid.

Fill up the cooling water bottle

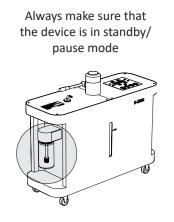

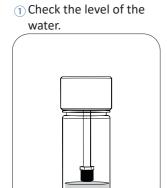


First-time users: There should be no water inside the cooling water bottle

(2) Twist the bottle to detach it from the device.


Turn the bottle clockwise to detach it from the device. Be sure to hold the base of the bottle to prevent it from dropping.


3 Remove the lid.

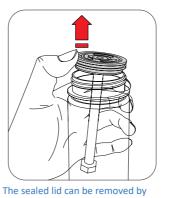

pushing up the top indented groove.


 Fill the sterile distilled water to the bottle.

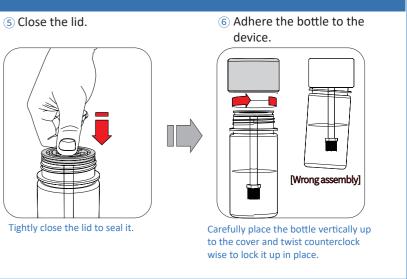

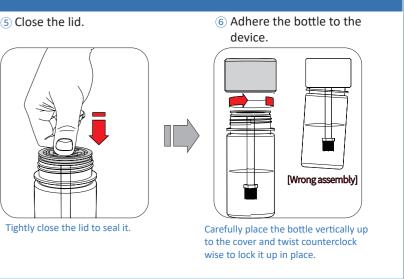


Fill it up to the minimum level. Do not add any additives and/or other substances (aromatic oils, etc.)

Operate the device

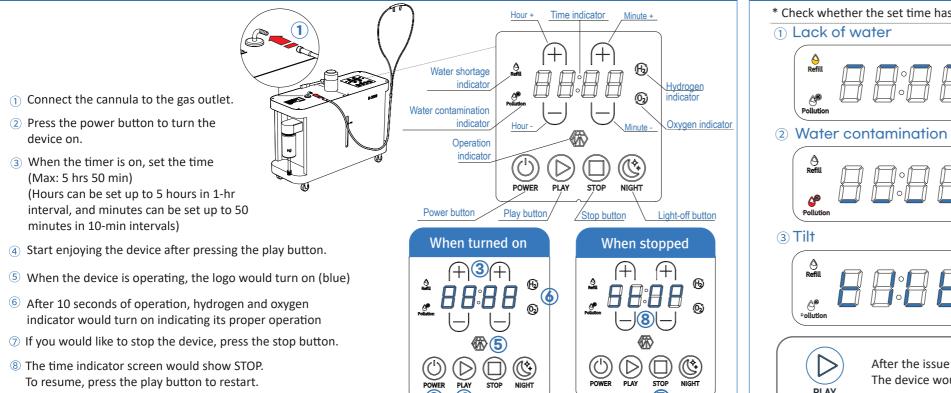

Checkpoints: when the device stopped working





Refill

¢.

 \triangleright

PLAY

* When the water shortage indicator is on, check the level of water in the tank and fill 1L of sterile distilled water to the water tank. The water shortage indicator is connected to the sensor that monitors the level of the water.

* Check for any contamination of the water. If the water contamination indicator is lit, drain the water and refill the tank with a sterile distilled water. The water contamination indicator does not indicate that the generated gas is contaminated. This indicator is to protect the polymer electrolytic cell inside the device.

* For safety reasons, when the device is tilted, the system of the device would be blocked. The screen would show 'tilt', so to resolve this, please put the device straight on a plain level and press play button again. It would operate normally.

After the issue has been resolved, press the play button to resume back. The device would not automatically restart.



